Pioneer *sound.vision.soul*

DOUBLE-DIN DVD NAVIGATION SYSTEM

AVIC-D2

Quick Start Guide

This guide is intended to guide you though the basic functions of this navigation system. For details, please refer to the Operation Manual and Hardware Manual provided with the product.

Published by Pioneer Corporation.
Copyright © 2006 by Pioneer Corporation.
All rights reserved.
<KYGHX> <06A00001>

<CRB2250-A/U> UC
Printed in China

Hardware buttons



(1) MAP button
Display the navigation map.

(2) AV button
Switch between navigation map screen and audio operation screen.

(3) VOL (+/–) button

(4) SRC (SOURCE) button
Press to toggle between audio sources.

(5) Joystick
Use for operation of audio source.

(6) OPEN/CLOSE button
Access the CD and DVD-ROM loading slot.

(7) ANGLE button
Change the angle of the LCD panel.

(8) DEST button
Access the main navigation menu.

(9) INFO button
Access the menu for traffic information, etc.

(10) TRFC button *1
Preset button for XM Instant Traffic & Weather audio service.


(11) P.ADJ/B.LIGHT button
Adjust the picture.

(12) MEMO button *1
Press and hold for MyMix functionality.

*1 GEX-P10XMT XM Digital Satellite Data & Audio Receiver (sold separately) is required, together with an active subscription.

Search function overview

This navigation system has multiple methods for entering your destination.

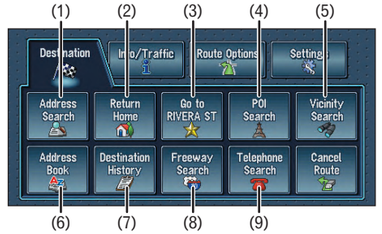

(1) Search by address
(2) Shortcut key for home address
(3) Shortcut key for favorite destination
(4) Search stores, restaurants, and other businesses in points of interest database
(5) Search stores, restaurants, and other businesses in your vicinity

Search result list for vicinity search



(6) Select a destination from your address book
(7) Select a previously routed destination
(8) Select a route to freeway entrance or exit
(9) Search destination by business telephone number

Searching your destination by address

1 Press or touch in the following order.
DEST button
➔ **Destination** tab
➔ **Address Search**

2 Input the house number and then touch "OK".



3 Input the street name.



4 Select the street name from list.



When route calculation is complete, navigation guidance begins.



5 Begin driving in accordance with navigation guidance.



This navigation systems gives you route guidance both visually and by voice.

Setting the voice guidance volume



Press or touch in the following order.
DEST button ➔ **Settings** tab ➔ **Volume**

Switching the view mode

Press MAP.



This navigation system allows you to select different view modes depending on your preference.

Scrolling the map

Touch where you would like to scroll to on the map screen.



Tapping it once will activate the shortcut keys. Touching it a second time will begin map scroll. To scroll the map, keep touching the map.

Zoom in or zoom out




(1) Direct scale change

(2) Gradual scale change

Traffic information on the map

Traffic conditions can be overlaid on the map when the optional GEX-P10XMT is connected, together with an active XM subscription.

GEX-P10XMT XM Digital Satellite Data & Audio Receiver (sold separately) is required, together with an active subscription.

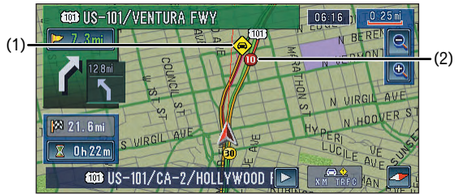

(1) Traffic event

- Stopped traffic
- Stop and go traffic
- Closed/blocked roads
- Other event (e.g., accident)

(2) Traffic flow

The following items represent the traffic flow for the road.

- 5-15 mph (8-24 km/h)
- 20-40 mph (32-64 km/h)
- 45 mph or faster (72 km/h or faster)

The icon indicates that the average speed of the road is over 45 mph (72 km/h).

Switching the audio screen


1 Switch the screen using the following buttons.



Operation of the built-in CD drive

You can play a CD using the built-in CD drive for the navigation system.

1 Access the CD loading slot and then insert the CD.



CD playback begins automatically.

2 Adjust the volume.

3 Touch the track list on the screen.



Touch the desired track on the list.

Advanced operation for MP3/WMA/WAV disc



(1) Shows the name of the folder currently playing


(2) Play the next or previous folder

(3) View the upper folder

Operation of XM Satellite Radio

You can use the navigation system to control a XM satellite digital tuner.

GEX-P10XMT XM Digital Satellite Data & Audio Receiver (sold separately) is required, together with an active subscription.

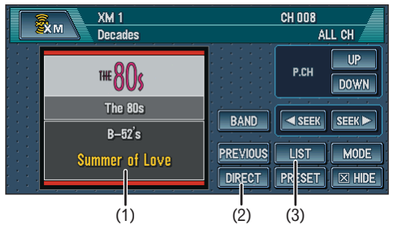

(1) Shows detailed information of current song

(2) Use to enter the channel number directly

(3) Use to toggle between the following displays:
Detail information display – Ch Name List – Song Title List – Artist Name List